


SERVING THE BUS TRANSPORTATION INDUSTRY 4121 Eastland Dr

Elkhart, IN 46516 Phone: 574-522-5000; FAX: 574-522-9099

Forward Gear Replacement


- 1. Remove the three $\frac{1}{4}$ " bolts attaching the motor to its motor mount.
- 2. Open door to full position.
- 3. Release Emergency Release Lever.
- 4. Remove forward door push-pull rod at the gear attach point.
- 5. Remove the ¼" bolts attaching the gear stabilizer to the gear pins. Units with the heavy-duty stabilizer remove the ¼" Allen head bolts mounted to the inside flange of the header base plate. Remove the stabilizer.
- 6. Remove forward gear.
- 7. Close aft door to full closed position.
- 8. Grease forward gear pin.
- 9. Clean top of aft gear for clear view of the gear timing marks.
- 10. Grease forward gear pin using white lithium grease. We recommend Lubriplate™ 630-AA grease.
- 11. Apply grease to tooth area of new forward gear and insert onto gear mounting pin.
- 12. Align all four timing marks, two on each gear (see attachment for correct timing mark usage).
- 13. Reinstall the push-pull rod attachment bolt but do not tighten.
- 14. Reinstall the stabilizer and tighten the bolts to 84 inch pounds. Apply thread locking compound to threads and reinstall the ½" bolts on the inside base plate flange if required.
- 15. Rotate the doors to the full open position and tighten the gear end push-pull rod attachment bolt to 50 foot pounds.
- 16. Reinstall drive motor and tighten bolts to 50 inch pounds.
- 17. Re-engage emergency release lever and operate door system.
- 18. Inspect for correct rigging and re-rig as required.

A&M Systems Gear Timing Marks, Old AFT with New FWD Standard Actuator

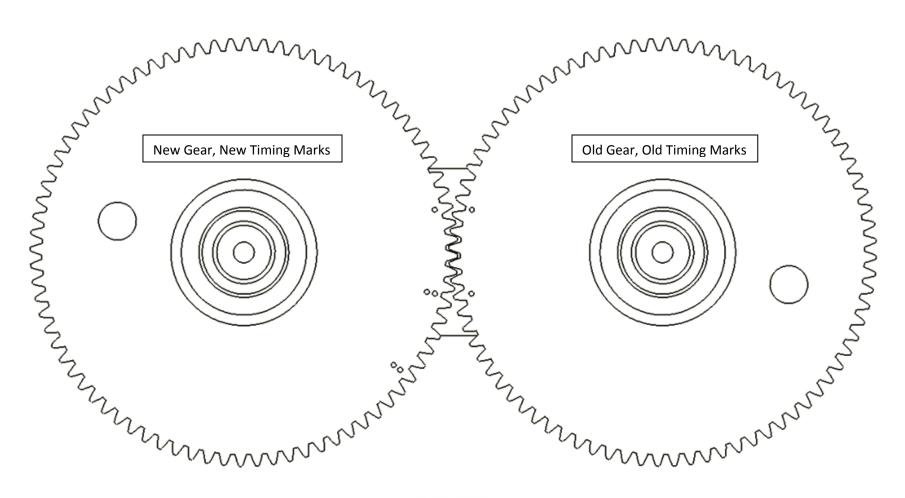



A&M Systems Gear Timing Marks, New AFT with New FWD Standard Actuator

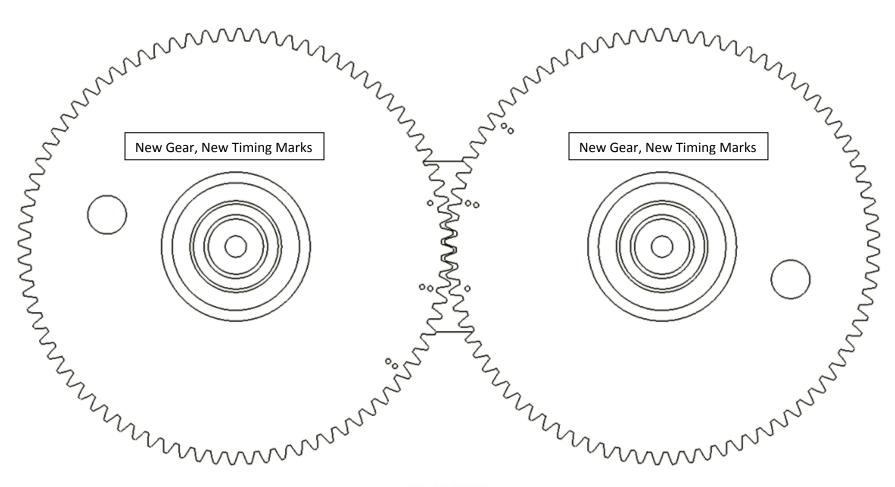



A&M Systems Gear Timing Marks, New AFT with New FWD Left-Handed and Vertical Actuator

